Metron RS Front hub drive side (DS) carbon spoke placement

	Merton RS	OK	NG
1	Note: The position of the carbon spoke T-head must align with the inner groove of the hub body	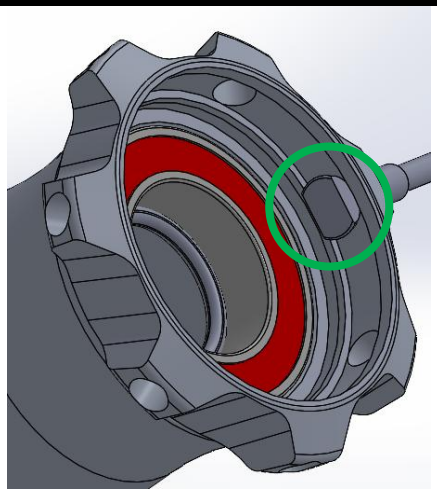	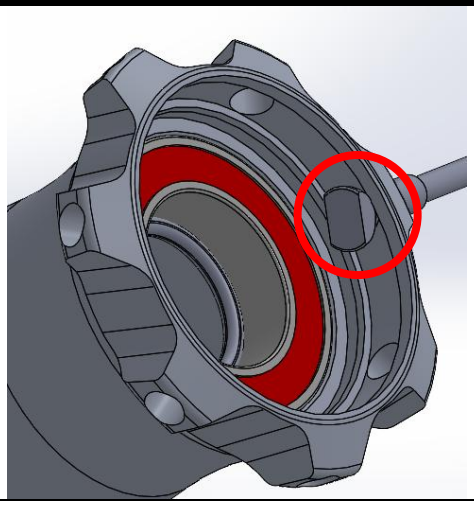
2	Description	(a) Carbon spoke T-head height (b) must enter the inner groove (c) of the hub body and align with the inner groove. 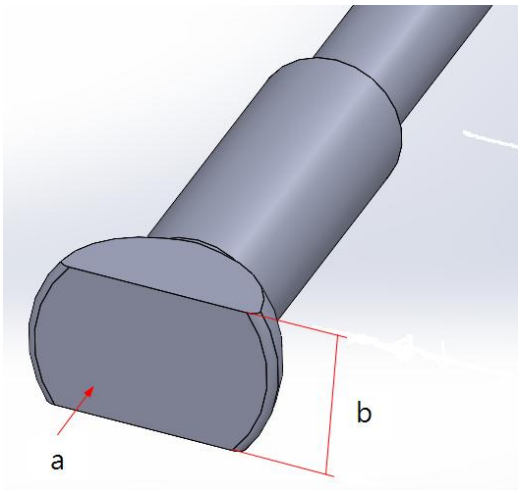 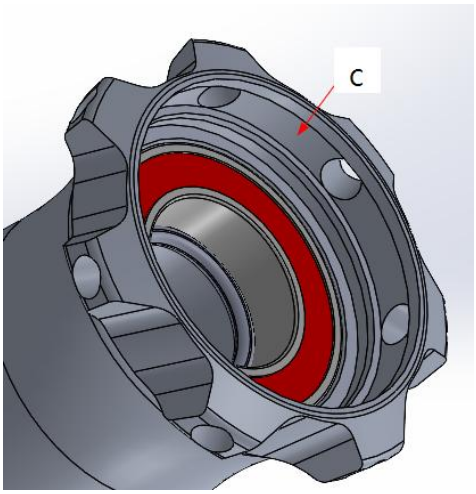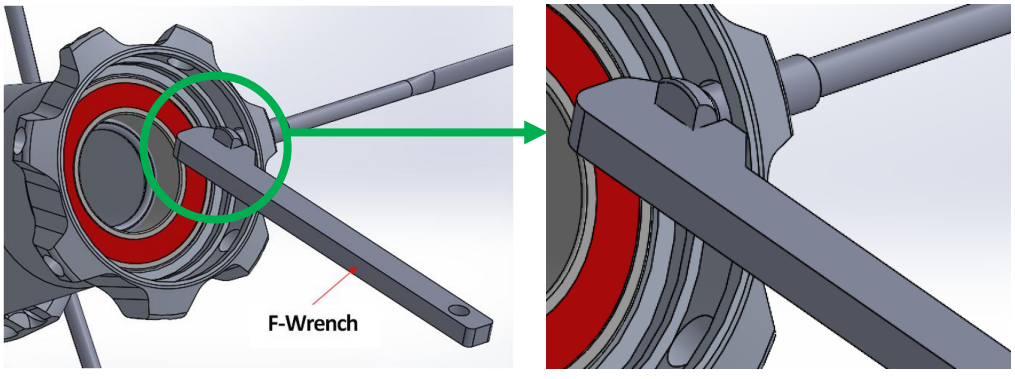	
3	Adjustment	Use F-Wrench to hold the carbon spoke T-head, adjust the spoke to position as below.